



Installation Instructions

TH-2050-VFM Flat Screen Wall Mount / Full Motion

Components Checklist

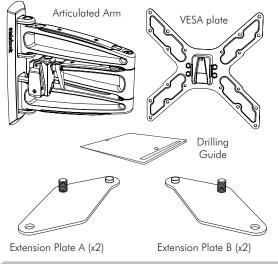

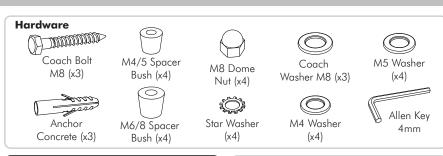

TOOLS REQUIRED:

- Power Drill
- Phillips Head Screwdriver
- Spirit Level
- 5mm (0.2") Drill Bit
- 10mm (0.39") Masonry Drill Bit
- 13mm (0.51") Socket Wrench or Shifter
- 14mm (0.55") Socket Wrench or Shifter



IMPORTANT INFORMATION

- ! IMPORTANT Install Wall Mount as per Installation Instructions.
- Telehook Wall Mount supports Displays weighing up to 35kg (77lbs), with VESA hole configurations:
 - 100x100mm • 200x100mm • 200x200mm
- 300x200mm
- 300x300mm


- 400x200mm using Extension Plates supplied
- 400x300mm using Extension Plates supplied
- 400x400mm using Extension Plates supplied
- ! The Manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components


Check you have received all parts against the Component Checklist and Hardware above.


Step 2. Locate Drilling Position


Choose the location of your Telehook Wall Mount, ensuring that the wall is structurally sound (for a timber stud wall, locate the stud using a stud detection device). Use the Drilling Guide to mark out the hole centres.

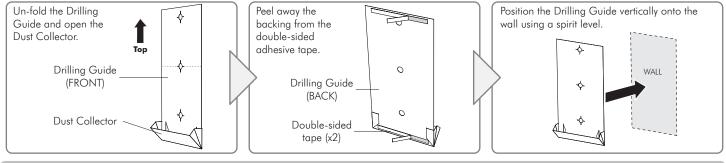


Step 3. Attaching the Articulated Arm to the Wall

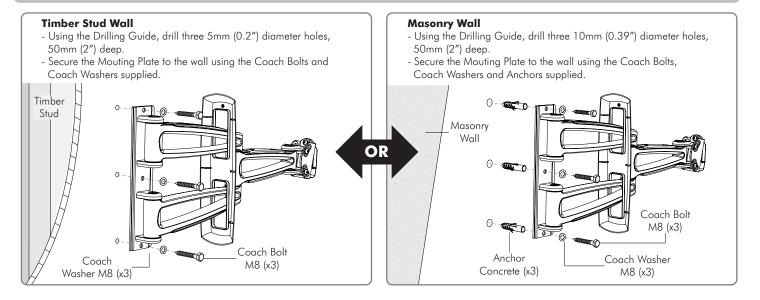





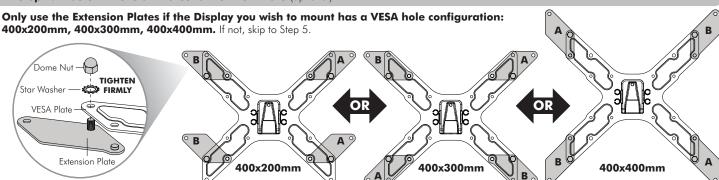


Step 5. Attaching the VESA Plate to your Display

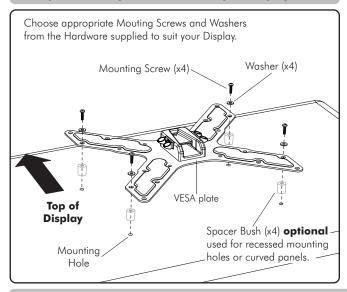





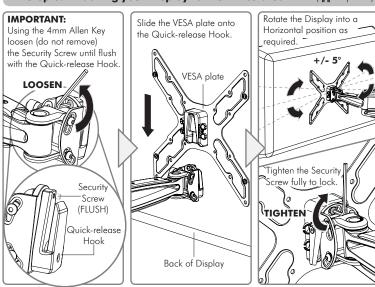


Step 7. Cable Management

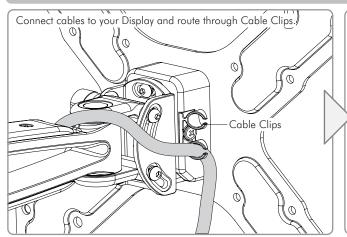



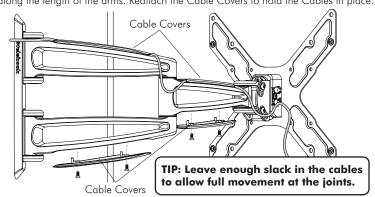

Step 8. Tilt Adjustment

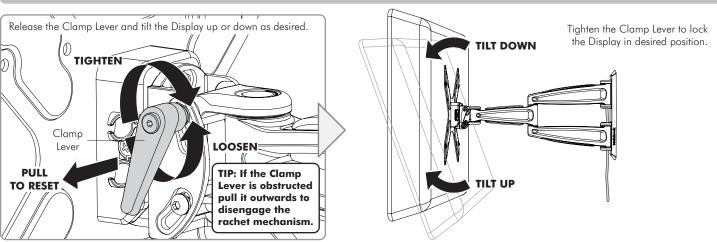

Installation Complete